



How to use the instax Biz™ App

Using the App		2
Things you'll need		3
Before using the App	Create template image instax™ mini instax™ SQUARE instax™ WIDE	4 - 6
Homescreen		7
 Prepare	Create a template	8
	Template preview	11
	Share template	12
	Template list	13
 Shoot/Print	Select a template	14
	Print ① Shoot and print	15
	② Print an image from the "Photos Folder"	18
 Print results	Checking print results	20
Additional Functions	Trash	21

Using the App

Create template image

Create an image to use as a template.



instax™ mini



instax™ SQUARE



instax™ WIDE

How to use the App



Prepare

Prepare the template you want to use to shoot and print

- Create template
- Preview template
- Share template



Notes


You must be connected to the Internet



Shoot/Print

Select a template, then shoot and print from your Smartphone or Tablet

- Select template
- Print

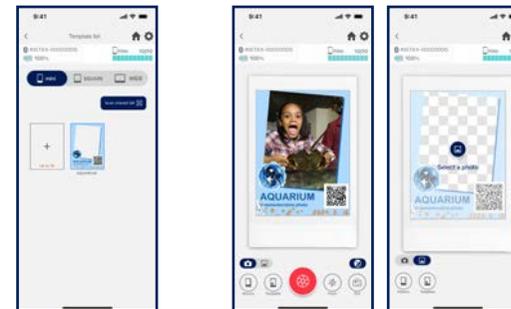

1. Shoot and print
2. Print an image from the "Photos Folder"

Reprint: Print from "History", located at the bottom of the camera screen




Print results

Check print results by date or template

- Check the number of prints by date or by template

You can also check the total number of shared templates from all Smartphone and Tablets

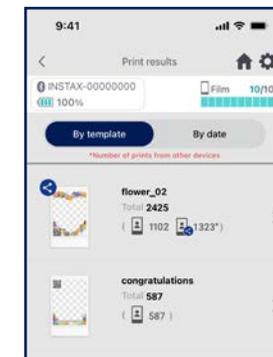

Notes

You must be connected to the Internet

Things you'll need

instax Link™ smartphone printer series

instax mini Link 3™



instax SQUARE Link™



instax Link WIDE™



* See the manual included with your device for printer connection (Bluetooth) settings.
 * Also compatible with the instax mini Link 2™. Operations not guaranteed with other smartphone printers.

instax™ Instant Film mini, SQUARE or WIDE



Use instax™ mini film for instax mini Link 2™, instax™ SQUARE film for instax SQUARE Link™ and instax™ WIDE film for instax Link WIDE™.

Android or iOS device (Smartphone or Tablet)



Ensure the device and OS are compatible with the instax Biz™ App

Operation guaranteed OS
 • Android 10 or later
 • iOS 16 or later "instax Biz™ app (free download)"

instax Biz™ app (free download) Android / iOS



Download and install from Google Play™ or the App Store


Template image

Template image



Compatible formats: png
 *See pg. 4-6

Logo image, etc.

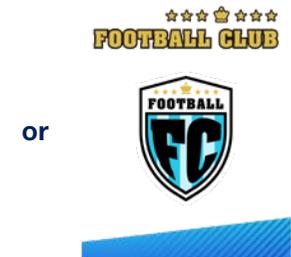

Compatible formats: png, JPEG, HEIF

Before using the App

Create template image

instax™ mini


Use image editing software to create a template image on your computer, smartphone or tablet.

Recommended size (unit: pixels)

instax™ mini: 600 x 800


Notes

- Use “QR code” or “Date print” to print QR codes or dates in the foreground in the following location
- Backgrounds are transparent, so use a png file.

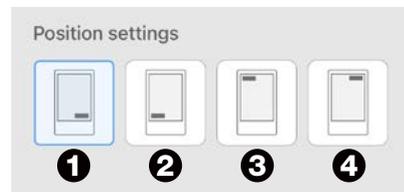


- Use the Set Position button to set the four corners
- Position can also be adjusted manually.

*See pg. 9

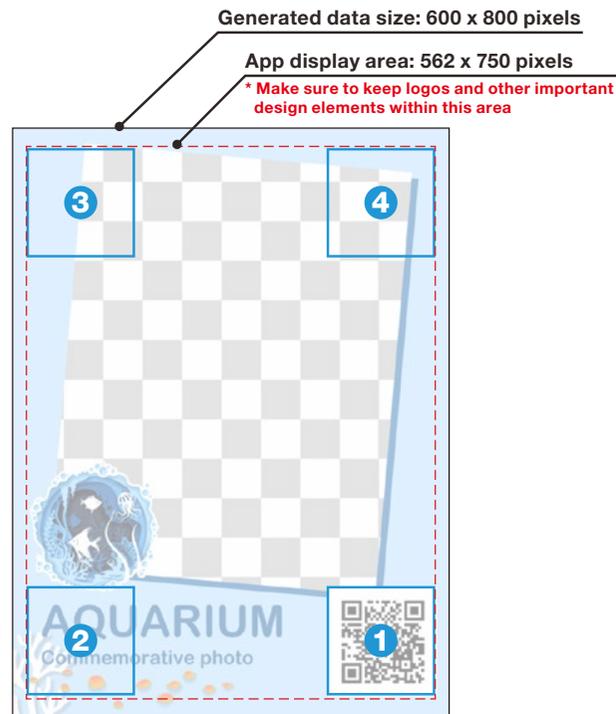

1 - 4 are for a layout made with the Set Position button for only a QR code

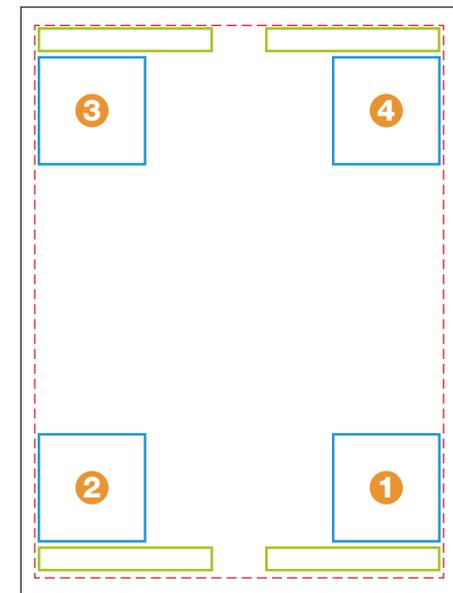

1 - 4 are for a layout made with the Set Position button for a QR code and the date

Before using the App

Create template image

instax™ SQUARE



Use image editing software to create a template image on your computer, smartphone or tablet.

Recommended size (unit: pixels)

instax™ SQUARE: 800 x 800

Notes

- Use “QR code” or “Date print” to print QR codes or dates in the foreground in the following location
- Backgrounds are transparent, so use a png file.

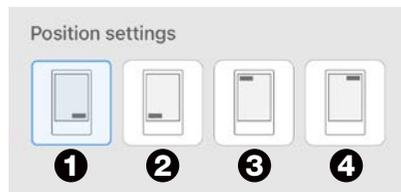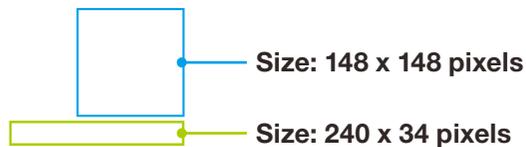


- Use the Set Position button to set the four corners
- Position can also be adjusted manually.

*See pg. 9



1 - 4 are for a layout made with the Set Position button for only a QR code

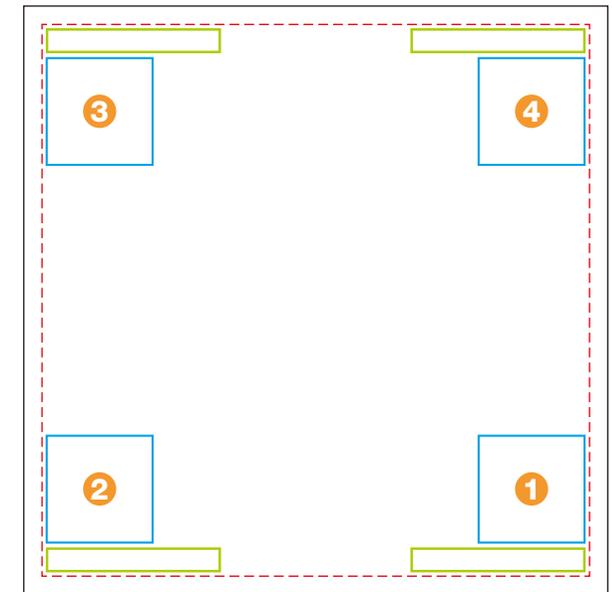

1 - 4 are for a layout made with the Set Position button for a QR code and the date

Before using the App

Create template image

instax™ WIDE



Use image editing software to create a template image on your computer, smartphone or tablet.

Recommended size (unit: pixels)

instax™ WIDE: 1,260 × 840


Notes

- Use “QR code” or “Date print” to print QR codes or dates in the foreground in the following location
- Backgrounds are transparent, so use a png file.

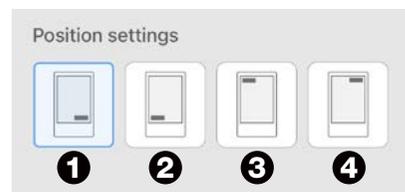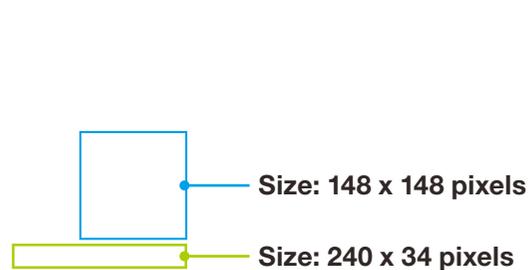


- Use the Set Position button to set the four corners
- Position can also be adjusted manually.

*See pg. 9

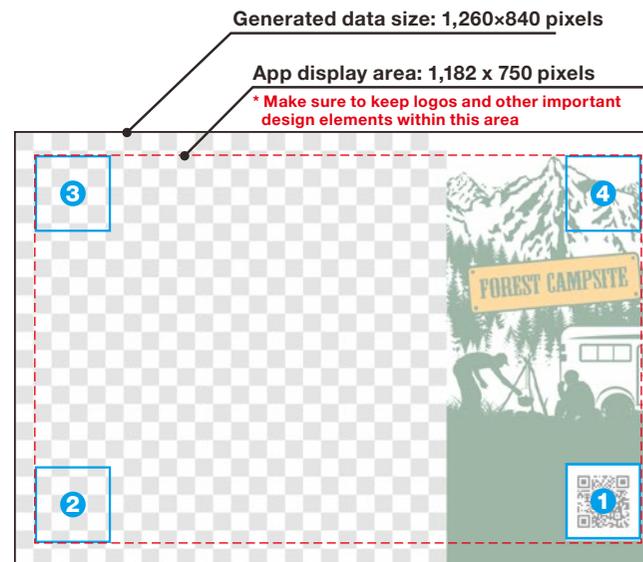


1 - 4 are for a layout made with the Set Position button for only a QR code

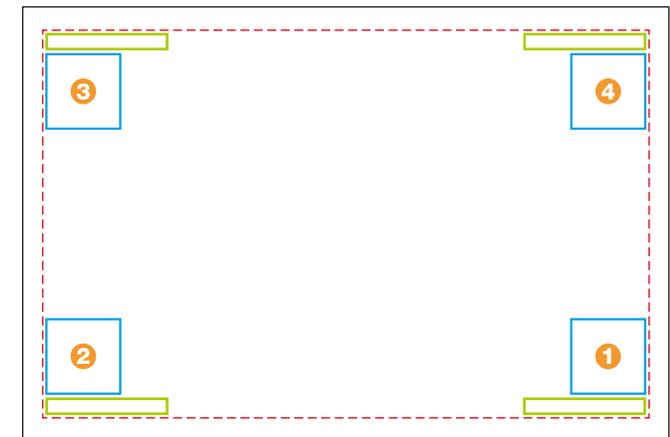

1 - 4 are for a layout made with the Set Position button for a QR code and the date

Homescreen

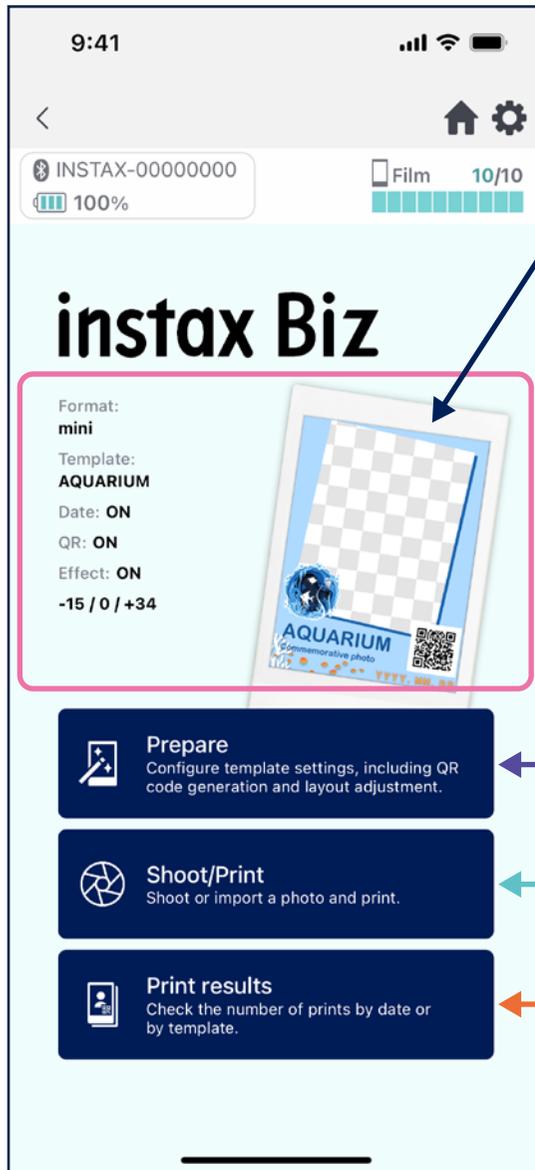

Display settings for the selected template



Prepare

pg. 8 - 13

Set the template for your Smartphone or Tablet



Shoot/Print

pg. 14 - 19

Shoot and print from your Smartphone or Tablet



Print results

pg. 20



Check print results by date or template

Prepare

Create template 1

- Create a new template.

Prepare
Configure template settings, including QR code generation and layout adjustment.

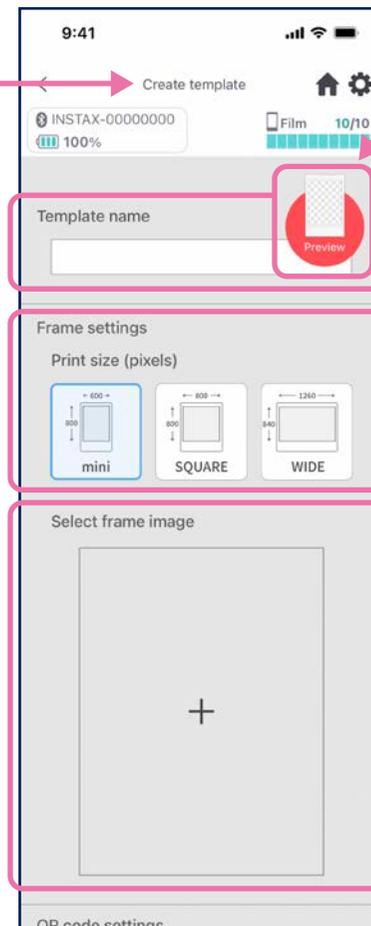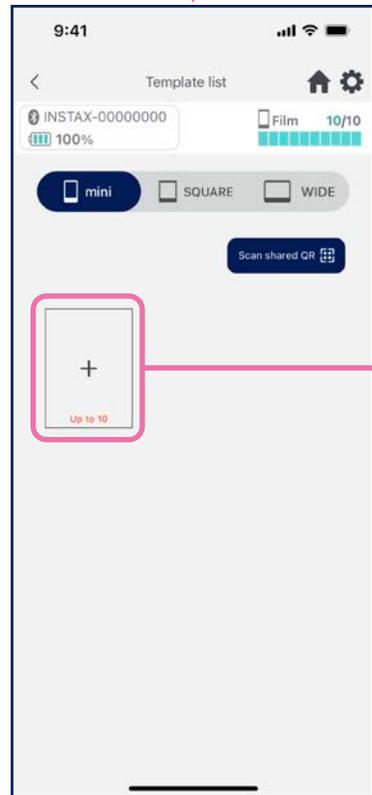

You can preview the template you are creating and adjust its layout.

*See pg. 9

Template name

Up to 26 alphanumeric characters

Print size


Select mini, SQUARE or WIDE

Select image

Select a template image from the photos folder

*See pg. 4-6 for how to create a template image

*Up to three images can be added

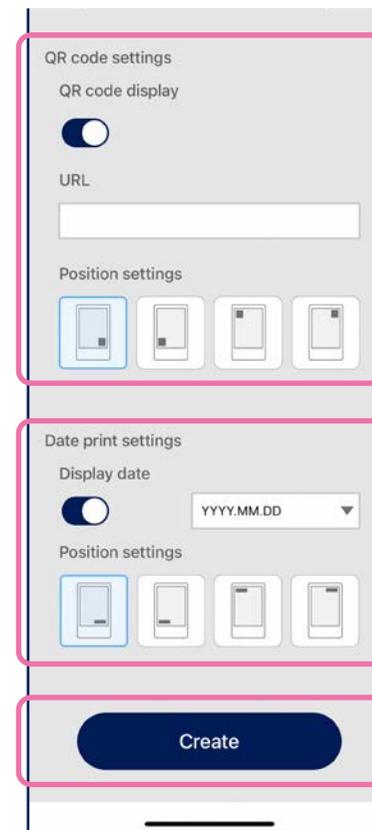

Turn QR code printing on/off

Link destination URL

Position for QR code printing

• Turn date printing on/off
• Date format

Date print position

Push the “Create” button to make your template

Notes

To create a template, you must be connected to the Internet

These images are combined and turned into a single image when you press the Create button. Once combined, they can no longer be edited individually.

Prepare

Create template ②

- Adjust the layout.



Adjust the image / QR / date layout

- Expand / shrink (image only)
- Change positioning
- Reset
- Fit to frame (image only)

*You can also pinch to expand / shrink / change the position of the image.

Change operation mode

Change layer

*See pg. 10


Prepare

Creating a template ③

- Adjust the template by combining and placing elements, adding text, etc.


Change layer

Use the Change Layer button to adjust the order of multiple images. The image currently selected when the button is pressed becomes the first layer.

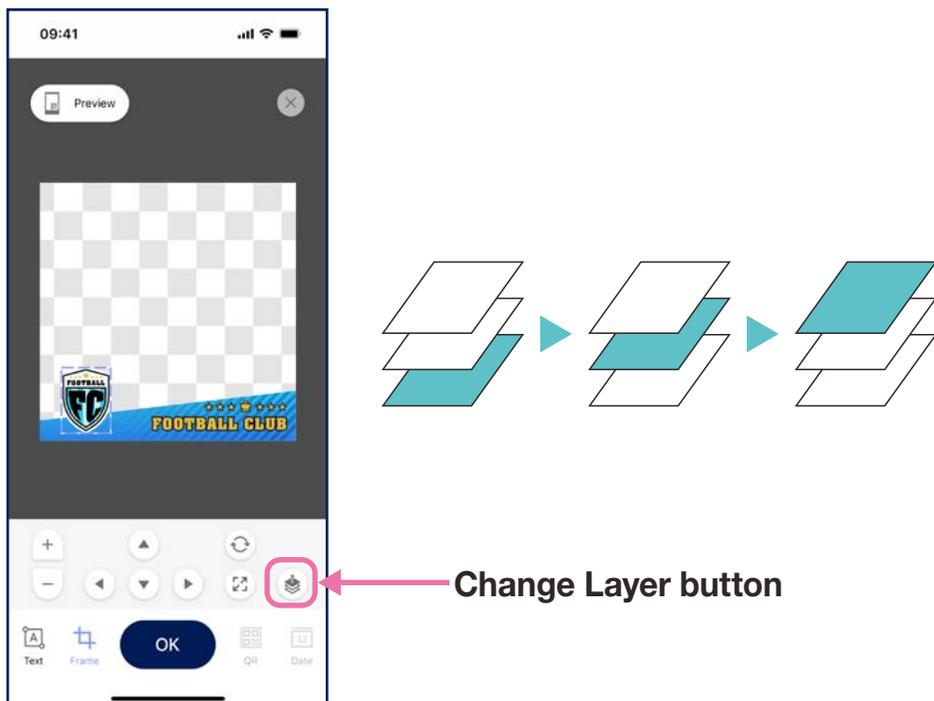

Add text

Add text or change style.

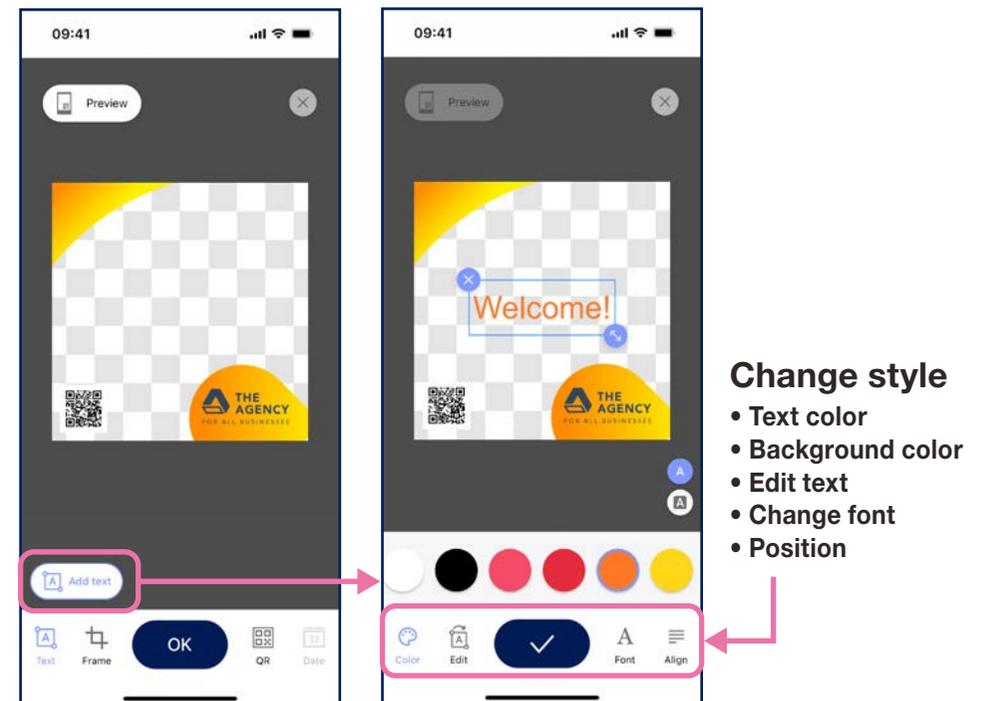

Prepare

Template preview

- Check or edit a template you created

Edit a template

Various parameters can be edited

* Only the URL of shared templates can be edited

Share template

* See page 12 for more information


Duplicate a template

Create a new template from the currently selected template

Delete

Move the template to the "Trash" folder in "Settings"

💡 Only 10 templates can be saved per size, so use this to delete templates you no longer need

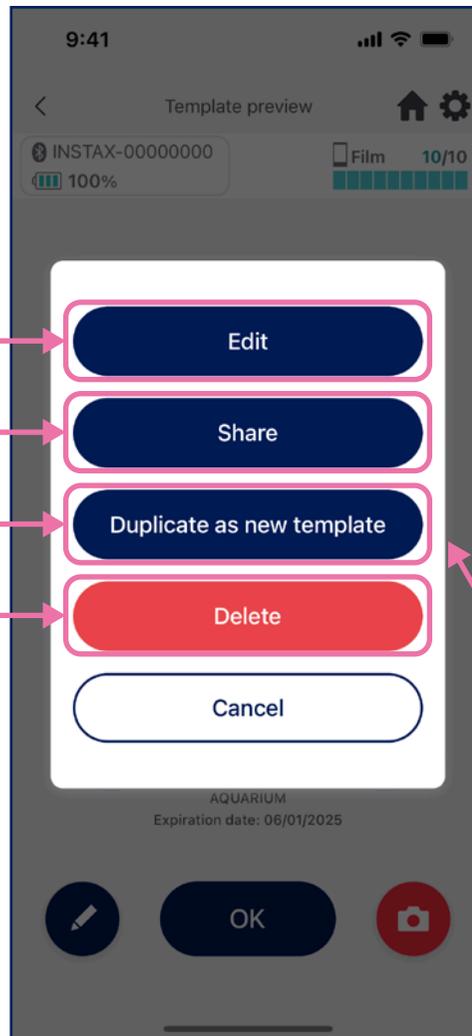

Template preview

💡 Tap to expand

- Template name
- Date of expiration

Expires two years after creation

💡 You can use "Duplicate as new template" to make a new template with the same settings as one that has expired



Select this template and go to the camera screen

Prepare

Share template

- Share the template with other Smartphone or Tablet * Can be skipped


1. Tap the “Share” button to create a QR code for sharing your template

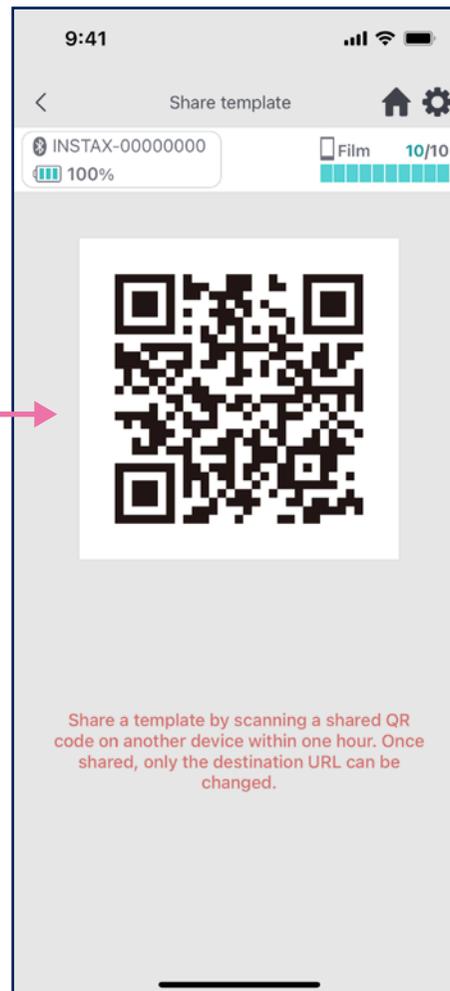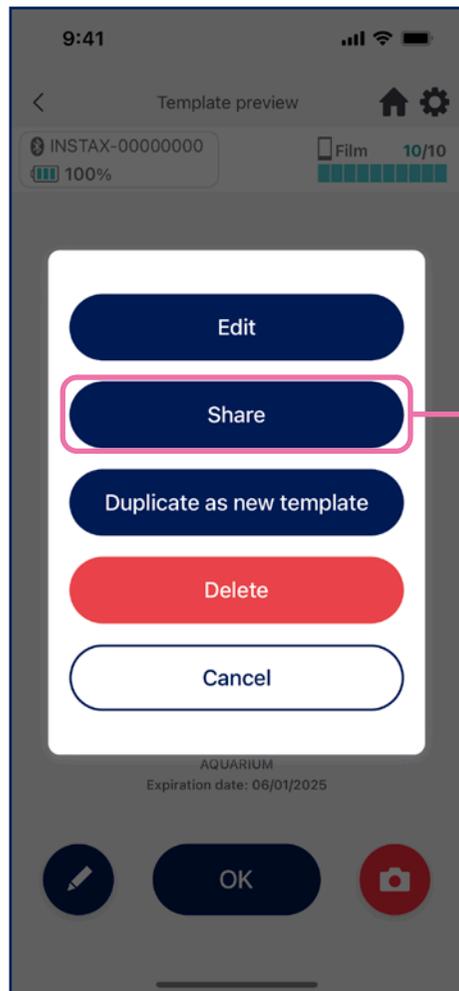

2. Scan the QR code with other smartphones or tablets

Templates are added to the instax Biz™ App when a QR code is scanned with a device's camera or when selecting

Scan shared QR on the template list screen

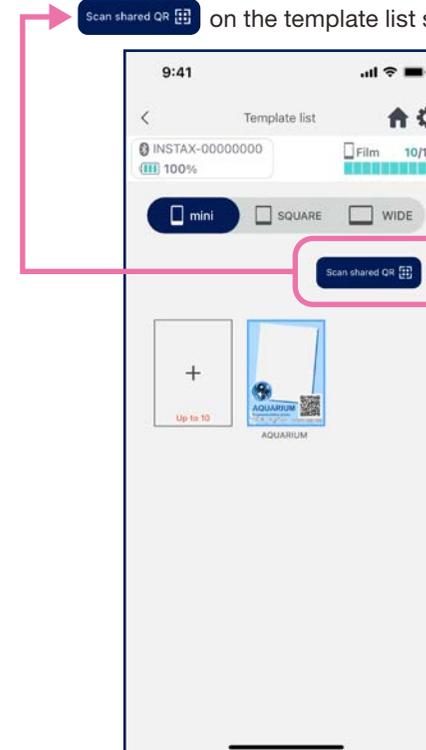


Notes

- QR codes for sharing templates expire in 24 hours.
- Once a template is shared, only the destination URL can be changed
- You must be connected to the Internet

Prepare

Template list

- Display templates saved to the App.

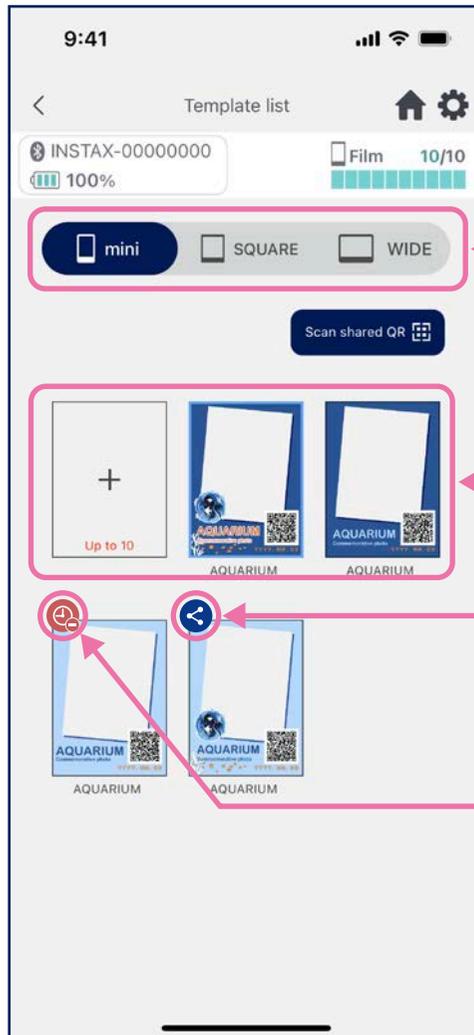

Select the template size

- Use “+” to create a new template (pg. 8)
- Select a template to check the preview (pg. 11)



Shared template

Template shared with another smartphone or tablet



Expired template

Template that has expired (two years have passed since creation)

💡 You can use “Duplicate as new template” to make a new template with the same settings as one that has expired



Shoot/Print

Select template

- Select the template you want to print

1. Launch the instax Biz™ App and tap the “Shooting/printing” button



2. Select “Template”



3. Select the size and template you want to print



4. Check the preview, then tap “Shoot” when you're ready



Shoot/Print

Print 1 Shoot and print

- Combine the image you shot with the template, then print

1. Tap the shutter button on the camera screen



 
Camera options

- Tap the camera screen to automatically adjust brightness and focus
- Pinch the camera screen to zoom in and out
- Switch the flash between on, off and auto
- Switch between back camera, front camera, and front camera mirrored shooting *See pg. 17
- Edit image (brightness / contrast / saturation)
- * Go to App settings for camera timer functions

2. Check your image on the preview screen then tap the Print button to start printing.




*You can take another picture while printing.
 Printing is displayed in the remaining film header while printing is in progress.
 You cannot print another image until the current image is finished printing.



Adjust brightness / contrast / saturation

*Once an image is adjusted, it is corrected with the set value unless changed.

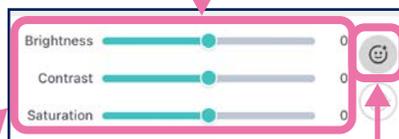

Select number of prints

Auto Correction button

*See pg. 16

Print button

Reshoot button

Notes

Images cannot be printed if the print size set in the App differs from the film size of the printer.
 Reconnect and try to print again.





Shoot/Print

Auto correction

- Press the Auto Correction button to automatically optimize individual images.

*Values cannot be adjusted manually during auto correction.

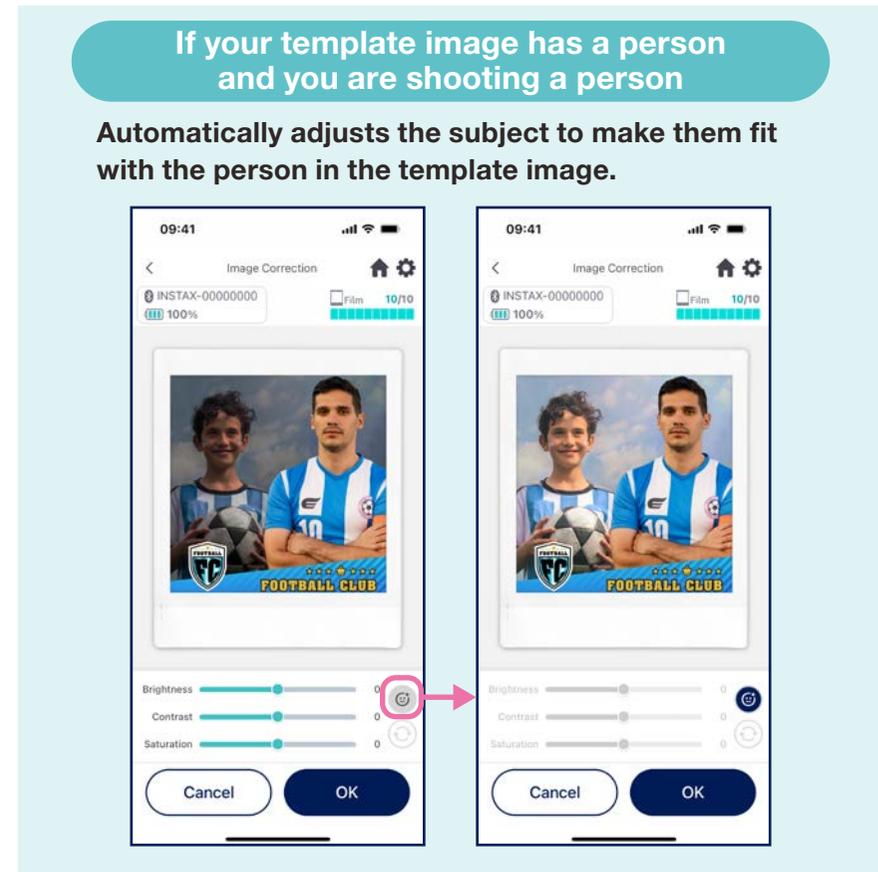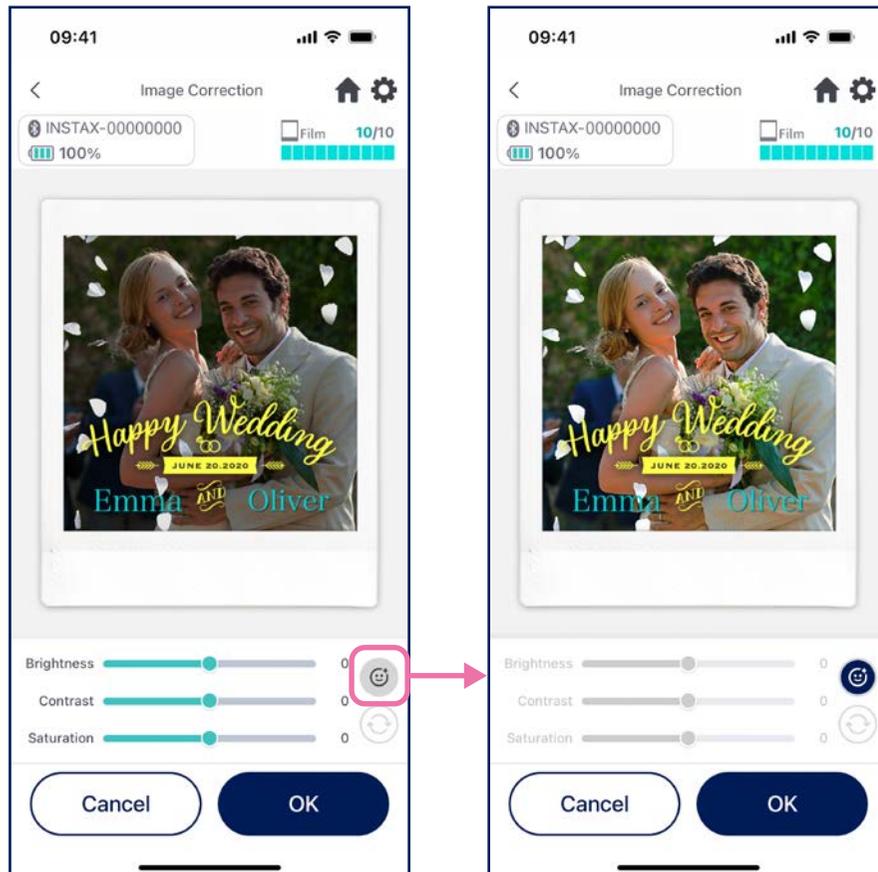

Shoot/Print

Front camera mirrored shooting

- Switch between three shooting modes: back camera mode, front camera mode, and front camera mirrored shooting mode. The front camera and front camera mirrored shooting modes make it easy to view the screen to shoot at the perfect moment!



Front camera mode

While shooting



Print



Image is horizontally flipped, including any logos or text.

Flips the image when printing.
Make sure to keep this in mind when shooting logos or text.

Front camera mirrored shooting mode

While shooting



Print



Horizontally flips the image when shooting, but switches it back when printing. This ensures that logos and other text print legibly, so it's great for sporting or other fan events.

Shoot/Print

Print ② Print an image from the "Photos Folder"

- Combine an image in your smartphone or tablet with the template, then print

1. Switch to "Print Mode" from the "Photos Folder"

2. Select an image

3. Add a template and edit the image

Easily edit the images using the touch screen functionality

Edit an image from your camera roll with the reset and rotate buttons.

Shoot/Print

Reprinting

• Reprint an image from your print history

1. Tap “History” at the bottom of the camera screen (far left)



2. Select the image you wish to print from those displayed on the "Image History" screen



3. Tap the print button to print the image



- Use the tabs on the bottom of the screen to switch the print size. Switch the connected printer to the correlating print size.
- Tap the “Select” button on the upper right of the screen to enter "Selection Mode" and delete multiple images at once.

Notes


- The “Image History” screen has the most recent 60 images per size (oldest image is deleted after 60)
- Print images cannot be saved (downloaded) to a device
- Images in your Image History cannot be edited.

Print results

Checking print results

- Check the number of prints by template or date.


By template

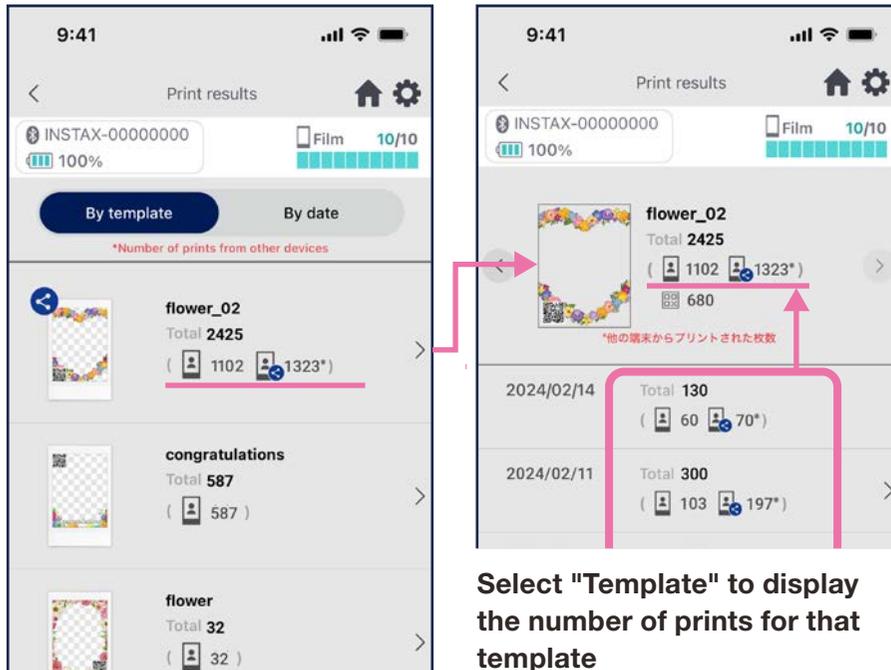

Select "Template" to display the number of prints for that template

💡 Data updates when you are connected to the internet and open the "Print Results" screen

By date

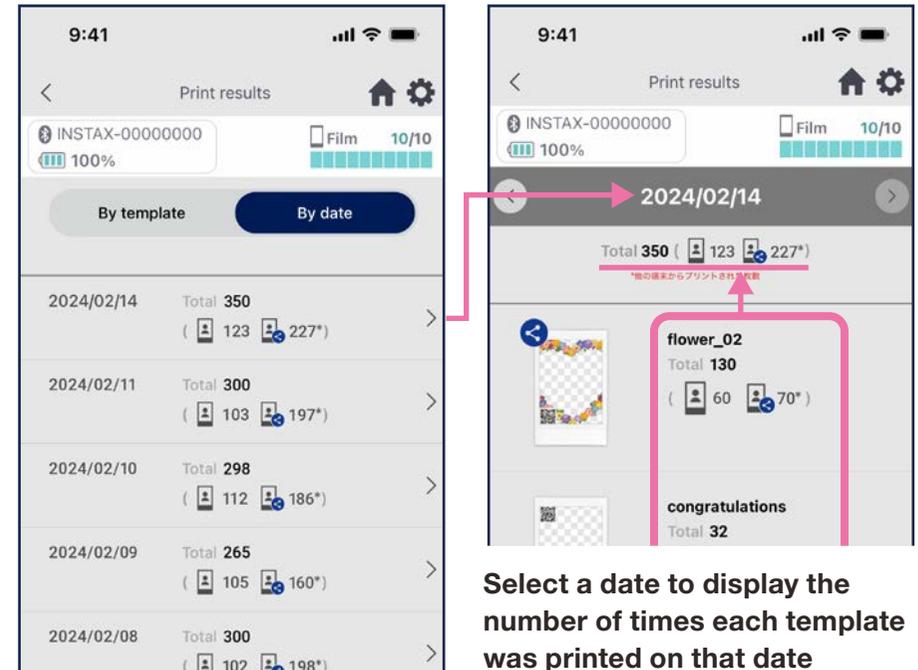

Select a date to display the number of times each template was printed on that date

Icons



Number of prints from your smartphone or tablet



Number of times a QR has been accessed per template

*You must be connected to the internet to use this feature. Only counts access from QR codes made on the instax Biz™ app.



Total number of prints from smartphones or tablet with which the image has been shared

* You must be connected to the Internet. Only data from smartphones or tablets connected to the Internet after printing is reflected in totals

Additional functions


Trash

- Templates deleted from "Template preview" are kept in the trash

1. Tap  in the upper right to open the "Settings" screen, then tap "Trash"



2. Select a template to delete or restore

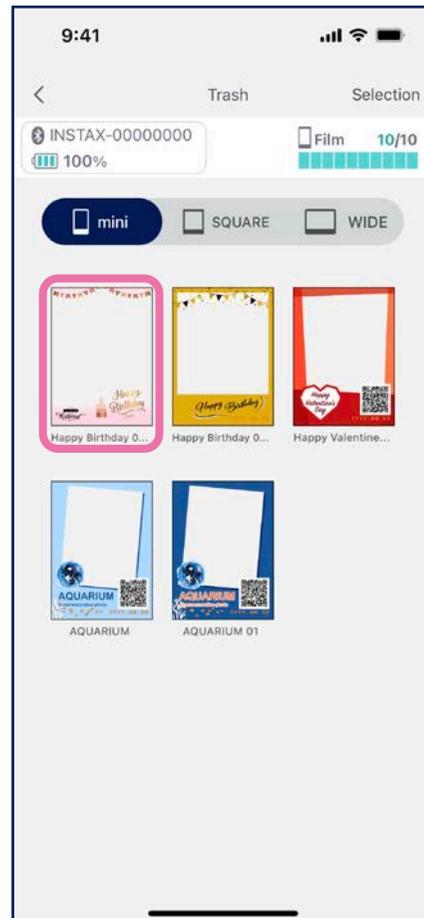

3. Tap "Delete" or "Restore"



-  Delete Deletes from the trash
-  Restore Returns the template to the "Template list"