

FUJIFILM

instax mini 13™

INSTANT CAMERA




User's Guide/Safety Precautions

Note when handling the instax™ mini instant film cartridge


EN Do not open the film door until you have used up all of the film; otherwise, the rest of the film is exposed and turns white. The film can no longer be used.



1

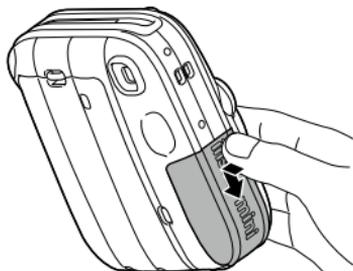

2

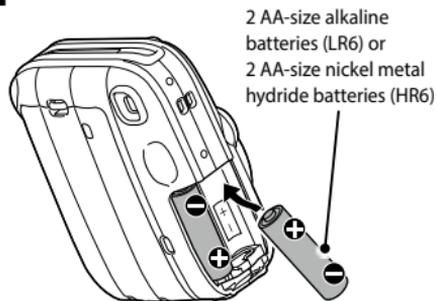

3






1



2

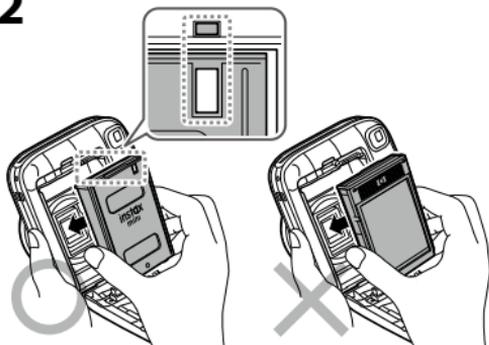


3





1


Flash Charging Lamp

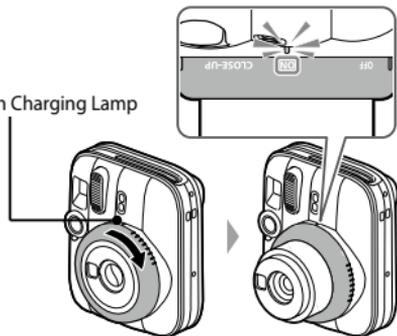

2




3

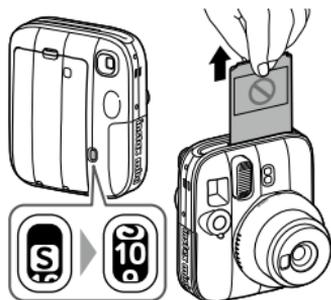




1

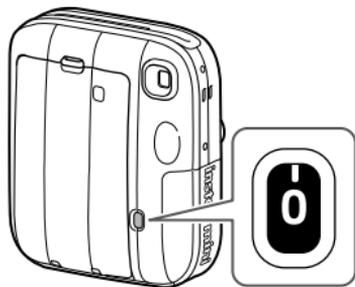

2

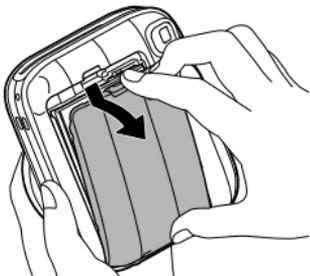

3



Before use

Before using the camera, check you have the following:


Supplied Accessories

- Hand strap with camera angle adjustment accessory (1)
- AA-size alkaline batteries (LR6) (2)


- Learn how to insert/remove batteries and instax™ mini film cartridges on pages 3 to 6.

Part names

Front

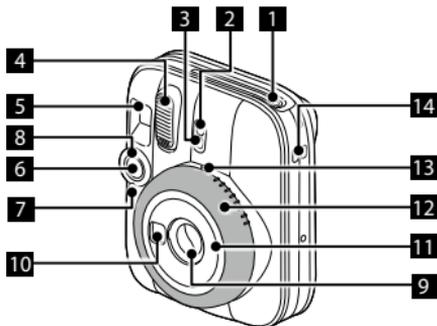

Rear

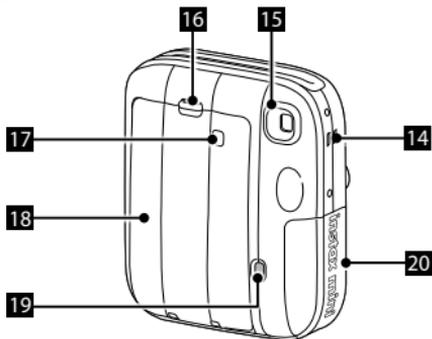


- 1** Film Ejection Slot
- 2** Flash Light Sensor
- 3** Auto Exposure Light Sensor
- 4** Flash
- 5** Viewfinder (Front)
- 6** Shutter Button
- 7** Self-timer Lever
- 8** Self-timer Lamp
- 9** Lens Cover / Lens
- 10** Selfie Mirror
- 11** Lens Barrel
- 12** Lens Ring
- 13** Flash Charging Lamp
- 14** Strap Eyelet
- 15** Viewfinder (Back)
- 16** Film Door Lock
- 17** Film Confirmation Window
- 18** Film Door
- 19** Film Counter
- 20** Battery Cover

Attaching the strap

Attach the hand strap with the camera angle adjustment accessory as illustrated below.

The camera angle adjustment accessory allows you to change the camera's angle (page 14).

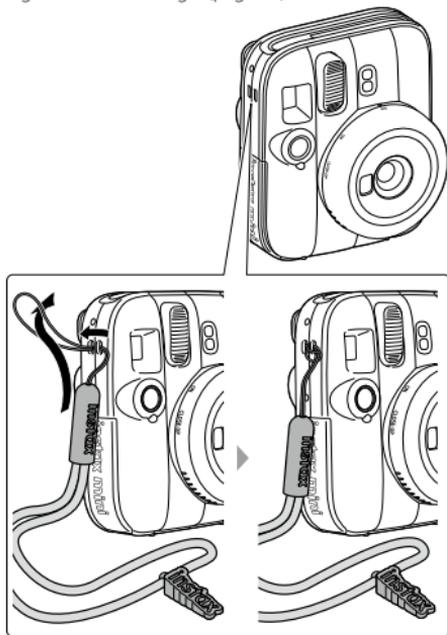


How to Take Photos

Do not open the film door until you have used up all of the film; otherwise, the rest of the film is exposed and turns white. The film can no longer be used.

1 Turn on the camera by rotating the lens ring to ON.

- * The lens barrel extends. When the flash charging lamp stops flashing and remains lit, and the self-timer lamp goes off, you're ready to take a picture.

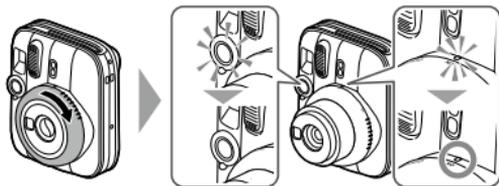

2 Hold the camera, look through the viewfinder of the camera to frame your desired composition, and press the shutter button.

- * The flash charging lamp blinks to indicate that the flash is charging. The shutter button cannot be pressed while the flash is charging.



3 When the sound of the film being ejected stops, grip the edge of the ejected film and take the film out. The film counter decreases in numerical order, counting down from "10" with each photo taken. "0" will be displayed when the film is finished and after the last photo has been taken.



4 When you have finished taking photos, turn off the camera by rotating the lens ring to OFF.




If the camera malfunctions, remove the batteries while the power is on and then reinsert them to reset the camera.

Taking a Photo in Close-Up Mode


Taking a close-up

Close-Up Mode allows you to get close to the subject.

- 1 Rotate the lens ring to the "CLOSE-UP" position to extend the lens outwards. The viewfinder field of view will adjust to the close-up shooting setting.

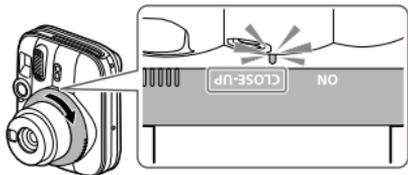


- 2 Hold the camera so that the mark in the viewfinder is in the center of the subject, then take a photo.

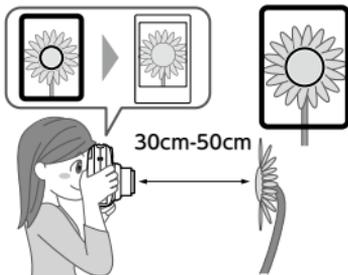


Taking a picture of yourself

Close-Up Mode allows you to take better selfies. Confirm the composition using the selfie mirror at the front of the lens, then you can take a photo.

- 1 Rotate the lens ring to the "CLOSE-UP" position to extend the lens outwards.
- 2 Hold the camera securely so that your face is 30 to 50 cm away from the end of the lens.

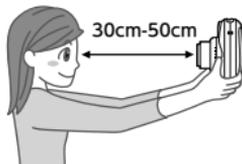

- 3 Confirm the composition using the selfie mirror, then push the shutter to take the photo.

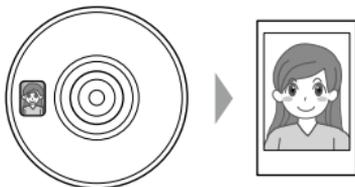

Using the self-timer


You can take hands-free photos using the self-timer. The self-timer has two timing options: 2-seconds and 10-seconds.

Self-timer (10 sec)


- 1 Turn on the camera by rotating the lens ring to ON.



- 2 Turn the self-timer lever all the way, hold it there for at least 2 seconds, and then release it. The self-timer lamp will **light up**.

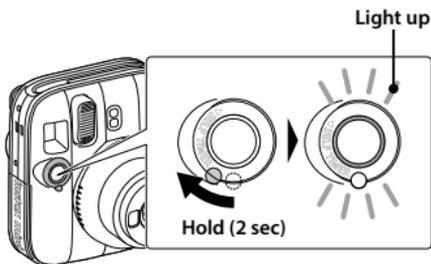

- 3 When you press the shutter button, the countdown will begin. The self-timer lamp will flash slowly for 7 seconds, then quickly for 3 seconds, and then the shutter will be released automatically.

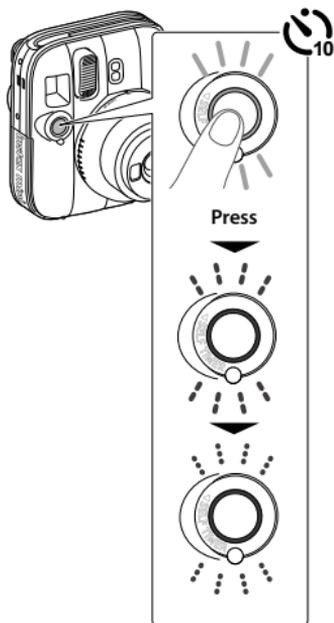


Self-timer (2 sec)


- 1 Turn on the camera by rotating the lens ring to ON.



- 2 Turn the self-timer lever all the way and hold it there for less than 2 seconds, and then release it.
The self-timer lamp will **flash**.

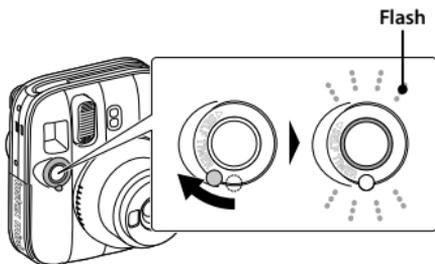


- 3 When you press the shutter button, the countdown will begin. The self-timer lamp will flash quickly for 2 seconds, and then the shutter will be released automatically.

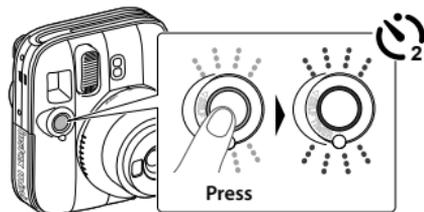

How to cancel the self-timer (10 sec or 2 sec)

To cancel the self-timer, turn the lever all the way back or return the lens ring to "OFF" and then turn the camera off.

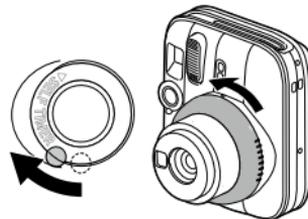


Using the camera angle adjustment accessory

You can change the camera angle using the camera angle adjustment accessory attached to the hand strap.



- 1** Place the camera angle adjustment accessory under the camera. The higher side should face the lens.

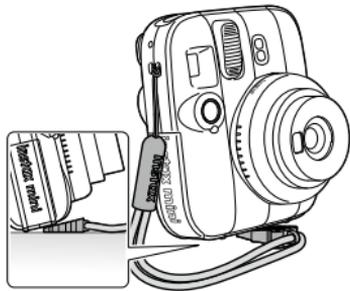

- 2** Press the shutter button to take a photo.



Precautions when Taking Photos

Precautions when holding the Camera



Correct way to hold the camera



Do not cover the flash with your fingers



Do not cover the Flash Light Sensor and Auto Exposure Light Sensor with your fingers

- Take care that your fingers and the strap do not cover the Flash Light Sensor, Auto Exposure Light Sensor, Flash, Lens, or Film Ejection Slot.
- Hold the camera so that the flash is at the top when taking a horizontal picture.
- Do not take photos in locations where flash photography is forbidden.
- Do not grip the lens barrel when holding the camera. The finished photos may be adversely affected.
- Look into the viewfinder so that the  mark in the viewfinder appears in the center of your subject.
- Be careful not to touch the lens when you press the shutter button.
- **When taking photos in the dark, hold the camera firmly to prevent blurring, as the shutter speed may be slow.**

Distances for Normal Mode and Close-up Mode

- In Normal Mode, take a picture at a distance of at least 0.5 m from the subject. The effective flash range is up to approximately 2.2 m.
- Use Close-up Mode when holding the camera closer than 0.5 m from the subject. Close-up Mode allows you to take photos at a range of 30 to 50 cm from the subject.

Lamp indicators and troubleshooting

- Flash Charging Lamp : The lamp located above the lens ring.
- Self-timer Lamp : The lamp located inside the Self-timer Lever.

Flash Charging Lamp status	Description
Lit	Ready to take a photo.
Off	Camera is off.
Slow flashing	The flash is charging. Please wait until the charging lamp light stops flashing, and the light is on.
Repeated slow flashing and quick flashing	The battery voltage is low.
Quick flashing	An error has occurred. <ul style="list-style-type: none">• The film is jammed.• Incorrect lens ring position.• Other error

Self-timer Lamp status	Description
Lit → off	When the camera is turned on, the Self-timer Lamp will light for approximately 1 second. Once the light turns off, the camera is ready to use.
Lit	A 10-second self-timer is set. When you press the shutter, the countdown begins, and the light flashes slowly (7 seconds) and then quickly (3 seconds) to let you know when the shutter will be released to take the picture. *To cancel the self-timer, rotate the lever again or turn the lens ring to the OFF position.
Flashing	A 2-second self-timer is set. When you press the shutter, the countdown begins and the light flashes quickly (2 seconds) to let you know when the shutter will be released to take a picture. *To cancel the self-timer, rotate the lever again or turn the lens ring to the OFF position.

Problem	Solution
The battery voltage is low	Replace the batteries with new ones.
Film jammed	Do not forcibly pull out the film. Remove the batteries, and reinsert new batteries. It may then be possible to eject the film.
Incorrect lens ring position	Set the lens ring in the proper position.
Other	The camera may be malfunctioning. Remove and reinsert the batteries while the power is on.

IMPORTANT SAFETY NOTICE

- Do not use this product and its accessories for a purpose other than taking photos.
- This product has been designed with safety in mind, but please read the following safety precautions carefully and then use the product correctly.

WARNING

This symbol indicates danger, which could result in injury or death. Please follow these instructions.

-  Never attempt to take this product apart. Electric shock may occur.
-  Do not touch this product if the inside of it becomes exposed due to dropping, etc. This product has high voltage circuitry that may cause electric shock.
-  Do not handle this product with wet hands. Electric shock may occur.
-  If you notice anything abnormal, such as the camera (batteries) becoming hot, emitting smoke, or making a burning smell, remove the batteries immediately. Fire or burns may occur (be careful not to burn yourself when removing the batteries).
-  Never take flash photographs of people riding bicycles, driving cars, skateboarding, riding a horse and the like. The flash can be startling, distract, frighten animals, and otherwise cause an accident.
-  If you drop the camera in water or if water or a piece of metal or other foreign object gets inside, remove the batteries immediately. Heat generation or fire may occur.
-  Do not use this camera in places where there is flammable gas or near open gasoline, benzene, paint thinner or other unstable substances which can give off dangerous vapors. Failure to do this could result in

explosion or fire.

-  Keep the product out of the reach of infants and small children. Injury may occur.
-  Do not disassemble, heat the batteries, throw them in a fire, or put them in an electrical short circuit. The batteries may rupture.
-  Use only AA-size alkaline battery (LR6) or AA-size nickel metal hydride battery (HR6). Heat generation or fire may occur if other batteries are used.
-  Keep batteries out of the reach of infants. An infant may accidentally swallow a battery. In the event that a battery is swallowed, seek medical attention immediately.

CAUTION

This symbol indicates a matter that may lead to injury or physical damage if ignored or incorrectly handled.

-  If the camera is not functioning correctly, to avoid injury do not attempt to repair yourself.
-  Do not touch any parts inside of the film door. This may cause injury.
-  Do not cover or wrap the camera in a cloth or blanket. This can cause heat to build up and distort the casing or cause a fire.
-  Using a flash too close to a person's eyes may for the short term affect their eyesight. Take care when taking pictures of infants and young children.
-  Take care not to make a mistake with the ⊕ and ⊖ polarities when inserting the AA batteries. Damages to the surroundings may occur due to the camera being damaged or its battery fluid leaking out.
-  Do not touch moving parts inside the camera. You may be injured.
-  For AA batteries, use alkaline or nickel metal hydride batteries.
Do not mix alkaline and nickel metal hydride batteries.

Do not mix old batteries with new ones.

	The "CE" mark certifies that this product satisfies the requirements of the European Union (EU) regarding safety, public health, environment, and consumer protection. ("CE" is the abbreviation of Conformité Européenne.)
----------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

	The "UKCA" mark certifies that this product satisfies the requirements of Great Britain (England, Scotland, Wales) regarding safety, public health, environment and consumer protection. *UKCA: UK Conformity Assessed.
----------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

- **Legally required regulation compliance displays are located on the inside of the film door cover of the camera.**

Handling

- **Cautions when handling the camera**

1. **Do not open the film door until you have used up all of the film; otherwise, the rest of the film is exposed and turns white. The film can no longer be used.**
2. The camera is a precision instrument, so do not get it wet, drop it, or subject it to shock. Also, do not place the camera where it will be exposed to sand or grit.
3. Do not use solvent such as paint thinner or alcohol to wipe off dirt.
4. Any dirt or dust in the film chamber will affect the finish of the print. Do not allow the film chamber to get dirty or dusty.
5. Do not leave the camera in a closed motor vehicle, another hot place, a humid place, on the beach, etc., for any period of time.

6. Gas containing moth repellent may adversely affect the camera and film. Avoid keeping the camera and film in a chest of drawers, etc. with mothballs.
7. The operating temperature range of this camera is +5°C to +40°C.
8. When taking photos, please be careful not to violate the rights of others, such as copyright, image rights, and privacy, or violate public order. Any act that violates the rights of others, or is contrary to public order or morals, or constitutes a nuisance, is subject to legal penalties and claims for damages.
9. This camera is for general household use. It is not suitable for commercial photography and other applications where a large number of prints are used.
10. Before using a commercially available strap, check the strength of the strap. Be especially careful when using a strap for mobile phones and smartphones because such straps are made for lightweight devices.
11. If you are not using your camera for a long period, take out the batteries and keep them where they will avoid heat, dust and moisture.
12. Remove soil and dust from the viewfinder window, etc., with an air blower and by wiping gently with a piece of soft cloth.

- **Cautions when printing**



- **Handling instax™ mini Film and Photos**

For details on the handling of film and photos, see the instructions written on the FUJIFILM Instant film instax™ mini packaging.

1. Keep film in a cool place. In particular, do not leave film in an extremely hot place, such as in a closed

- motor vehicle, for a long period of time.
- Do not make a hole in the film or tear or cut film. Do not use film that is damaged.
 - Use film as soon as possible after inserting it in the camera.
 - If film has been kept in a place where the temperature is extremely low or high, allow it to become accustomed to a normal temperature before taking pictures.
 - Use film before the film expiration date referenced on the packaging.
 - Avoid airport checked luggage inspection and other strong X-ray exposure. Unused film is susceptible to the effect of fogging, etc. We recommend that you carry film onto aircraft in carry-on luggage (check with the relevant airport for more information).
 - Avoid exposing photos to strong light, and store them in a cool and dry place.
 - Do not cut or disassemble the instax™ mini film as it contains black caustic alkali paste. Be especially careful not to let infants or pets put the film into their mouths. Also take care that the paste does not come into contact with skin and clothes.
 - If you accidentally touch the paste of unused film, immediately wash it off with plenty of water. If the paste comes into contact with the eyes or mouth, wash the area and then seek medical attention. The alkalinity of this film will weaken approximately 10 minutes after the photo is ejected from the camera.
 - Do not store photos in a sealed bag, as this may cause discoloration.
 - Do not touch the film during development.

■ Cautions when handling film

For details, see the instructions on the FUJIFILM instax™ mini Instant Film packaging.



Specifications

Film used	FUJIFILM instax™ mini Instant Film (sold separately)
Photo Picture Size	62 mm × 46 mm
Lens	2 components, 2 elements, f = 60 mm, 1:12.7
Viewfinder	Real image finder, 0.37×, with target spot Features parallax correction function for Close-Up Mode
Shooting Range	0.3 m and beyond (use Close-Up Mode for 0.3 m to 0.5 m)
Shutter	Programmed electronic shutter 1/2 to 1/250 sec. Slow synchro for low light
Exposure Control	Automatic, Lv 5.0 to 14.5 (ISO 800)
Film Ejection	Automatic
Film Developing Time	Approx. 90 seconds (varies depending on the ambient temperature)
Flash	Constant firing flash (automatic light adjustment), recycle time: 7 seconds or less (when using new batteries), effective flash range: 0.3 m to 2.2 m

Power Supply	Two AA-size alkaline batteries (LR6), capacity: approx. 10 instax™ mini instant film packs of 10 exposures each per set of new batteries (depends on usage conditions) * The supplied batteries are for initial use. When they run out, replace them with new ones (Two AA-size alkaline batteries LR6 or Two AA-size nickel metal hydride batteries HR6). * Do not mix alkaline and nickel metal hydride batteries. * Manganese batteries cannot be used.
Auto Power Off Time	After 5 minutes
Self-timer	Electronic operating time: approximately 2 seconds / 10 seconds
Other	Includes film counter and film pack confirmation window
Dimensions (W × H × D)	105.5 mm × 124.7 mm × 67.6 mm
Weight	327 g (without batteries, instax™ mini film loaded and strap attached)

Notes on Disposing the Camera



Disposal of Electrical and Electronic Equipment in Private Households
Disposal of used Electrical & Electronic Equipment
(Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product, in the manual and in the warranty, and/or on its packaging indicates that this product should not be treated as household waste. Instead it should be taken to an appropriate collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

In countries outside of the EU: If you wish to discard this product, please contact your local authorities and ask for the correct way of disposal.



This symbol on the batteries or accumulators indicates that those batteries should not be treated as Household waste.

For customers in Turkey:

EEE Complies with Directive.

Information for traceability in Europe

Manufacturer: FUJIFILM Corporation
7-3, Akasaka 9-Chome, Minato-ku, Tokyo
Japan

Authorized representative in Europe:
FUJIFILM Europe GmbH
Balcke-Duerr-Allee 6, 40882 Ratingen
Germany

EU Importer: FUJIFILM Europe B.V.
Oudenstaart 1, 5047 TK Tilburg
The Netherlands

product.safety.eu@fujifilm.com
UK Importer: FUJIFILM UK Ltd.
Fujifilm House, Whitbread Way,
Bedford, Bedfordshire, MK42 0ZE
UK

FUJIFILM, *instax* and *instax mini 13* are registered trademarks or trademarks of FUJIFILM Corporation and its affiliates.

© 2026 FUJIFILM Corporation. All rights reserved.

EN If you have any inquiries about this product, please contact a FUJIFILM authorized distributor, or visit the website below.

DE Falls Sie Fragen zu diesem Produkt haben, beziehen Sie sich bitte auf die Details auf der beiliegenden Kundendienstkarte oder besuchen Sie die unten angegebene Website.

FR Si vous avez des questions sur ce produit, veuillez vous adresser à un distributeur Fujifilm agréé, ou consultez le site web ci-dessous.

ES Si tuviera alguna pregunta sobre este producto, consulte la información en la tarjeta de servicio adjunta o visite el siguiente sitio web.

ZHT 如果您對本產品有任何疑問，請參閱隨附的服務卡上的詳情，或訪問以下網站。

KO 이 제품에 대해 문의가 있을 때에는, 동봉된 서비스 카드를 참조하시거나 아래의 웹 사이트를 방문하여 주십시오.

PT Caso tenha alguma questão acerca deste produto, por favor, contacte um distribuidor autorizado FUJIFILM, ou aceda ao website abaixo.

RU Если у Вас есть любые вопросы относительно этого изделия, обратитесь к авторизованному дистрибьютору FUJIFILM или посетите следующий веб-сайт.

IT In caso di domande relative al prodotto, contattare un distributore autorizzato FUJIFILM o accedere al sito web riportato di seguito.

NL Als u vragen hebt over dit product, gelieve contact op te nemen met een geautoriseerde FUJIFILM-distributeur of ga naar de onderstaande website.

PL Jeśli masz jakieś pytania dotyczące tego produktu, skontaktuj się z autoryzowanym dystrybutorem FUJIFILM lub odwiedź witrynę internetową podaną poniżej.

CS Máte-li jakékoli dotazy týkající se tohoto výrobku, obraťte se prosím na autorizovaného distributora společnosti FUJIFILM nebo navštivte níže uvedené webové stránky.

SK Ak máte akékoľvek otázky týkajúce sa tohto výrobku, kontaktujte autorizovaného distribútora spoločnosti FUJIFILM, alebo si pozrite nižšie uvedenú webovú stránku.

HU A termékkel kapcsolatos bármely kérdésével kérjük, keresse fel a FUJIFILM egyik hivatalos forgalmazóját, vagy látogasson el az alábbi weboldalra.

UK Якщо маєте якісь запитання щодо цього виробу, будь ласка, зверніться до вповноваженого представника FUJIFILM або завітайте на сайт, указаний далі.

NO Hvis du har spørsmål om dette produktet, vennligst ta kontakt med en autorisert FUJIFILM-distributør, eller gå til nettsiden nedenfor.

<https://global.fujifilm.com/>

FUJIFILM

FUJIFILM Corporation

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN